



Threaded Thermowells


HOW TO CONSTRUCT A PART NUMBER

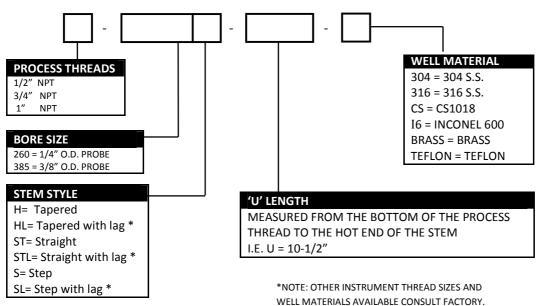



*NOTE: CALL OUT THE LAG LENGTH AT THE END OF THE PART NUMBER
I.E. ¾"-260HL-U=10-1/2-316, L=1-1/2"


'ST' STRAIGHT A 260' Bore 1/2' 1/2' 1/2' 1/4' 1



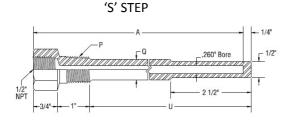



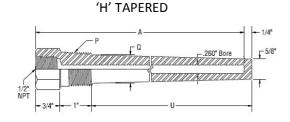



THERMOCOUPLE INNOVATIONS, INC. 1251 POMONA ROAD, UNIT 106 CORONA, CA 92880 PHONE (951) 215-7070 FAX (951) 279-1641 WEBSITE: <u>WWW.TCI-INC.COM</u>